 




使用说明 USER GUIDE

操作说明 | CONTROLS

后视图 REAR VIEW

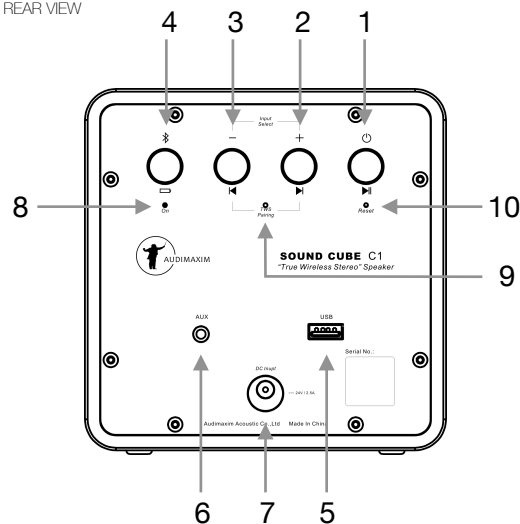


1. 关机状态下，按下开机。开机状态下，短按播放/暂停，长按 2 秒后关机。
In shutdown state, press to turn on the power. When the power is on, short press to get PLAY/ PAUSE operation. Long press over 2 seconds to power off the system.
2. 长按增加音量，短按选择下一首。
Long press to increase the volume, short press to select the next song.
3. 长按减少音量，短按选择上一首。
Long press to decrease the volume, short press to select the previous song.
4. 在蓝牙模式下，短按一下语音播报当前电池的电量，长按超过 2 秒可断开当前的已连接的蓝牙设备。
In BT mode, short press will voice prompt the current battery level, long press over 2 seconds forces to disconnect the BT connection, .
5. USB 接口 (仅限连接 U 盘和电脑播放音频，不支持手机充电)
USB interface (For USB disk and USB speaker function only, USB charging is not supported)

6. AUX 模拟音频接口
AUX analog audio interface
7. 电源适配器接口
Power adapter interface
8. 输入信源指示灯 (蓝牙模式: 蓝色; USB模式: 绿色; AUX模式: 红色)。蓝灯闪烁代表没有蓝牙连接, 蓝灯常亮代表已经连接蓝牙设备
Source indicator LED (BT mode: blue; USB mode: Green; AUX mode: Red). The flashing blue light means no BT connection, the blue light keeps on means the BT is connected.
9. TWS 配对指示灯 (灯亮起代表已配对)
TWS paired status LED (when the light is on, it means paired)
10. 重启按键 (遇到设备异常, 按下该键会重启设备)
Reset button (In case of device exception, pressing this button will restart the device)

蓝牙连接 | BLUETOOTH CONNECTION

在C1开机的状态下，当蓝色灯闪烁，代表蓝牙等待连接，请打开播放设备的蓝牙设置，在待连接蓝牙设备中找到“ AUDIMAXIM C1”并连接，蓝牙连接成功后会有语音提示，同时蓝色信号源指示灯会由闪烁变成常亮。
Turned on C1, when the blue light flashes, which means bluetooth is waiting for the connection, into the Bluetooth setting for the playback device, find "AUDIMAXIM C1" and select it. After a few seconds, when you hear the voice prompts and the blue LED light keeps on, it means the BT connection is successful.

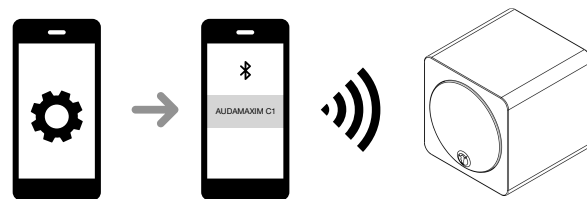


USB连接 | USB DEVICE CONNECTION

1. 将装有音乐文件的 U 盘直接插入 USB 接口
USB disk loaded with music files, plug into the USB port directly.



2. 用 USB-A 的连接线与电脑设备连接
Connect to your computer with a USB-A cable.

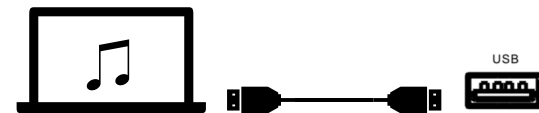

AUX连接 | AUX DEVICE CONNECTION

- 用 3.5mm 模拟信号音频线与设备连接
Connect to your device with a 3.5mm earphone jack cable.




SOUND CUBE C1
True Wireless Stereo Speaker

信号源选择 | SOURCE SELECTION

如果你的 C1 同时连接了蓝牙设备、USB 设备和 AUX 模拟音频设备，你可以通过同时短按“音量+、-”键来进行信号源的切换。

If your C1 is already connected to a BT device, a USB device, and an AUX analog audio device, you can select the source by short pressing the "volume + -" key together

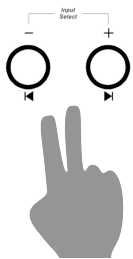


TWS 立体声配对 | TWS PAIR

如果你有两只 C1，你可以通过 TWS 配对来组成“真无线立体声”系统。把两只 C1 的电源开启，选择其中一只 C1，同时按住“音量+、-”键5 秒后松开，当听到配对成功的语音提示，同时“TWS paired”灯亮起，代表配对成功（如不成功则重复此操作）。

If you have two C1s, you can pair them to build a "true wireless stereo" system. Turn both on and select one, press and hold together the "volume + -" button for 5 seconds and then release, when you hear a voice prompts and the "TWS paired" light up, it means successful pairing (repeat this operation if unsuccessful).

如果要取消配对，同时按住“音量+、-”键5 秒后松开，当听到语音提示，“TWS paired”LED 灯熄灭，代表配对取消。

To unpair, Press and hold together the "volume + -" button for 5 seconds and then release. When you hear a voice prompts and the "TWS Paired" LED go out, it means paired off.

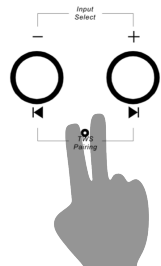

同时按住“音量+、-”键5 秒后松开
Hold press the "volume + -" button for 5 seconds

提示 TIPS:

★用立体声模式来欣赏音乐的体验，远比只用单只的要好很多，因此我们强烈推荐您使用 TWS 模式。

Listening to music in stereo mode is much better than mono, so we strongly recommend you use TWS mode.

★在TWS 配对和使用的時候，左右音箱之间距离不要超过 3 米，否则有可能配对失败。


When pairing and using TWS, the distance between left and right speakers should not be more than 3 meters, otherwise the pairing may fail.

★进行TWS配对操作的那一只 C1 为主箱，默认为右声道；另一个则为副箱，为左声道，蓝牙只与主箱连接，副箱将不会被蓝牙发现。

The C1 that performs the TWS pairing operation becomes the main speaker and be set to the RIGHT channel. The other is the sub-speaker, which is the LEFT channel. BT is only connected to the main speaker, and the sub-speaker will not be detected.

★TWS 状态下，主、副音箱背板的操作功能都可以使用，两边音箱会同时会受到操控。

In the TWS mode, the control operation can be used by the main and sub-speaker, and the two speakers will be controlled at the same time.

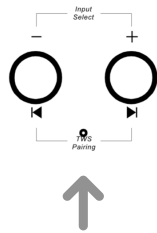

此LED 灯亮起代表已是 TWS配对状态。
The white LED is keeps on, means TWS has been paired

★在 TWS 模式下，音源输入（BT/USB/AUX）需与主箱连接，副箱的信号源指示灯为紫色。

In TWS mode, input source (BT/USB/AUX) are from the main speaker, in the mean time the input indication of sub-speaker is in purple color.

★在蓝牙模式下，如果 15 分钟无蓝牙连接，C1会自动关机以节省电池电量。

In Bluetooth mode, if BT not connected for lasting over 15 minutes, the C1 will shut down automatically to save battery power.

技术参数 | SPECIFICATION

蓝牙/ Bluetooth:

- 工作频率 Operating Frequency Band: 2.4~2.8GHz unlicensed ISM band
- 版本 Version: V5.0/V4.2 down compatible V2.1+EDR/V3.0/V4.0/V4.1/V4.1BLE
- 协议 Protocol: A2DP, AVRCP, HFP etc.
- 输出功率级别 Output Power Class: Class 2
- AFH 支持 Supports AFH (auto frequency hopping)

USB接口/ USB Interface:

- USB规格/Supports USB2.0 and down compatible USB1.1
- USB Disk Mode:
 - 支持格式 Supports file formats: FAT16/FAT32/ExFAT/FAT64
 - 支持容量 Capacity: >32G
 - 支持音频格式 Supports music formats: WAV/WMMA/FLAC/APE/AAC/MP3

模拟输入接口/ analog Input Connector:

- 3.5mm AUX earphone connector

功率放大/ Power Amplifier:

- Class D type with 2.0 design
- 60W x 2 (max) output power @4Ω 1kHz
- Frequency response: 55~20kHz
- THD+N: <0.1@50W/ch
- SNR: Digital input > 90dB, Analog input > 86dB

喇叭/ Speaker:


- 100mm paper cone full range speaker

电池/ Battery:

- 3400MA lithium batteries

电源适配器/ Power Adapter:

- Input: 100V~230V AC/50~60Hz, Output: DC 24V /2.5A

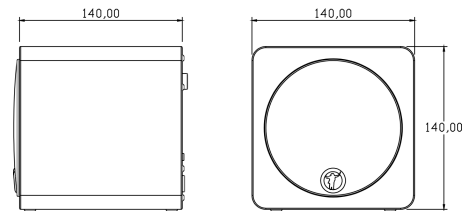

注意事项 | SAFETY INSTRUCTIONS

- 请不要将此设备在靠近水源的环境中使用。
Do not use this apparatus near water.
- 请用干爽柔軟的布进行清洁。
Clean only with dry and soft cloth.
- 使用环境温度在 5~40°C内，湿度无冷凝 30-90%。
operation temperature 5-40°C, humidity no condensation 30-90%
- 不要将设备靠近任何热源附近，如散热器、供暖器、火炉和其他产生热量的设备（包括放大器）
Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 请勿擅自拆解或修理本设备，请将所有维修工作交给合格的维修人员，当设备因为电源、电池损坏、暴露在雨中或潮湿环境中、跌落等情况不能正常工作，需要进行维修。
Do not open or repair this apparatus. Refer all servicing to qualified service personnel. Servicing to required when the apparatus has been damaged in any way, such as power-supply or battery is damaged, the apparatus has been exposed to rain or moisture, has been dropped, does not operate normally.
- 本设备的电源和电线仅供室内使用。
The power supply and power cord for this apparatus is intended for indoor use only.



音乐大师声学股份有限公司
AUDIMAXIM ACOUSTIC CO.,LTD
www.audimaxim.com